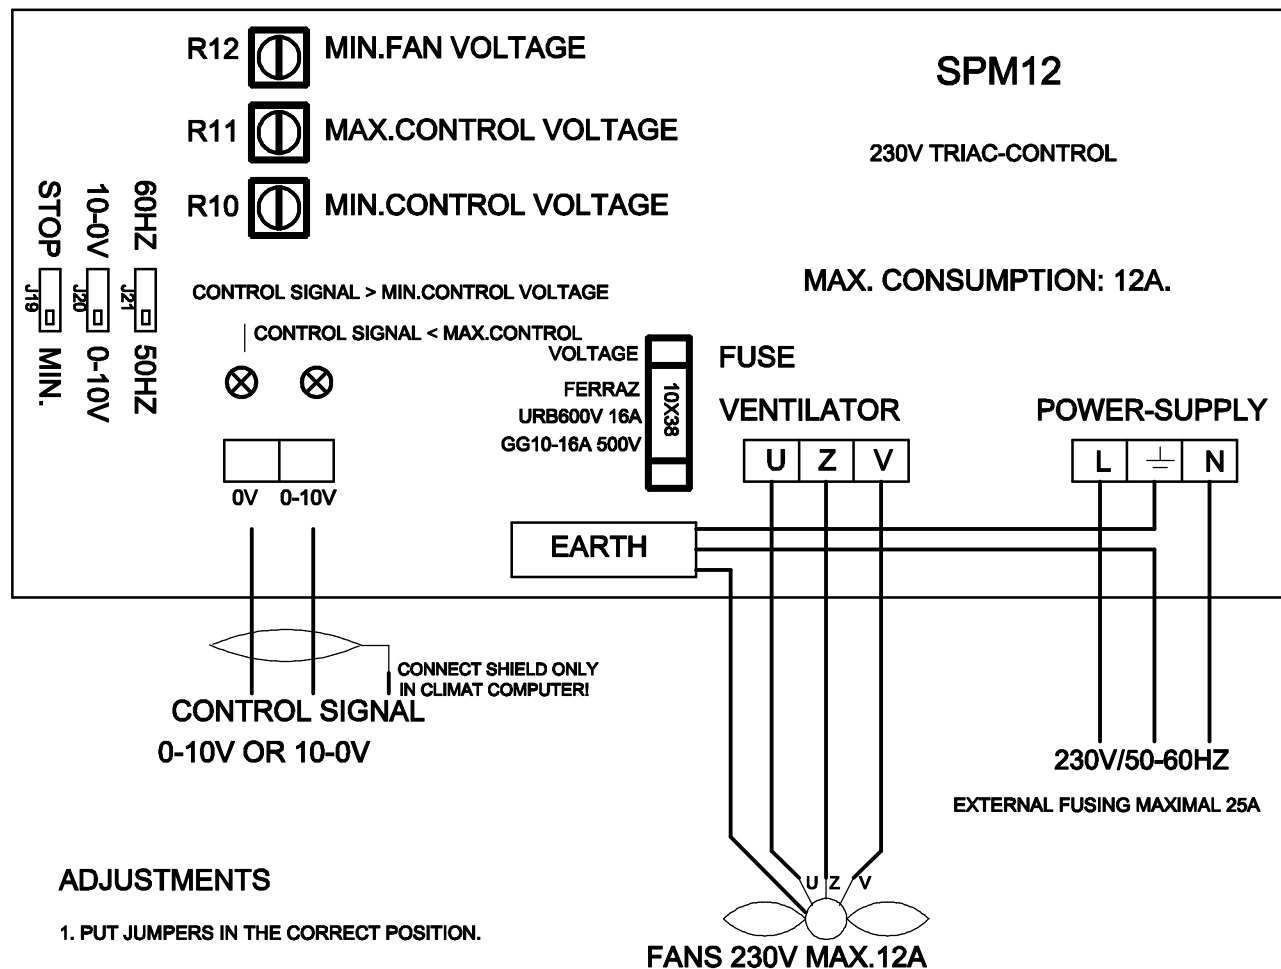


N.B. FAN STOP

IF JUMPER J19 IS IN THE TOP POSITION, THE FANS WILL STOP AS SOON AS THE CONTROL VOLTAGE DROPS BELOW 50% OF THE MINIMUM CONTROL VOLTAGE. THE FANS WILL START AS SOON AS THE CONTROL VOLTAGE RISES ABOVE 75% OF THE MINIMUM CONTROL VOLTAGE.

IF JUMPER J19 IS IN THE BOTTOM POSITION THE FANS WILL NEVER BE STOPPED.